


VISISCREEN™

Installation Guide

Visiscreen is vinyl coated fiberglass insect screen with a visible marker engineered in its construction, designed for elegance, safety and durability. It is suggested that the visible marker(s) are arranged running parallel with the intended door frame, ensuring that people and pets of all heights will benefit from their visibility. The woven design can be placed in different positions depending on your preference for placement.




Step 1

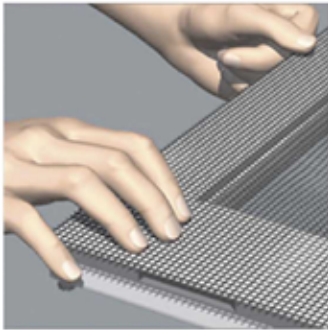


Lay Visiscreen over the door-frame with the marker placed in your desired vertical location. Align one edge of the screen with the outside edge of the door to ensure that the screen is square to frame and the visible marker is aligned with the door frame.

Step 2

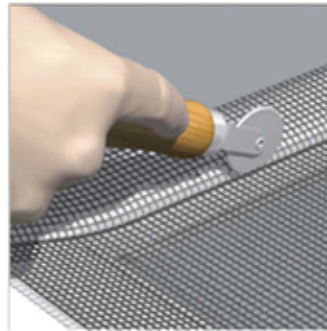

Use a convex roller tool beginning at one corner, use the spline-installation tool to press the screen into the groove on a long edge of the doorframe.

Step 3

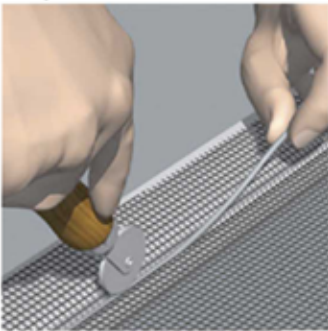


Use a concave roller tool to press the spline into the groove. Apply gentle pressure and angle the tool slightly toward the outside of the frame to avoid tearing the screen.

Step 4



Pull the screen tight.

Step 5

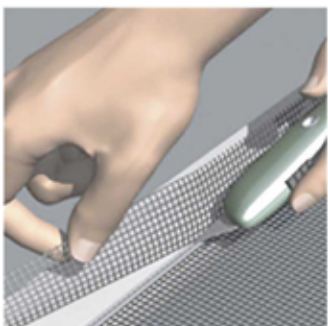

After installing all of the spline, use a sharp utility knife to trim the excess screen. position the knife tip at the junction to the spline and outside edge of the spline groove.